


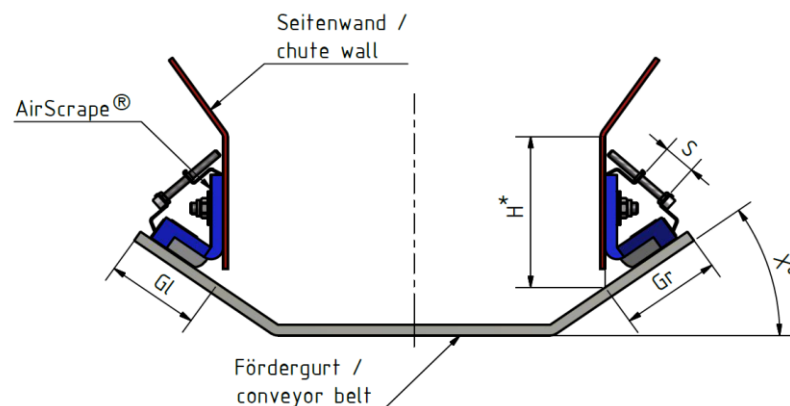

ATTENTION!

The belt overhang (Gr and Gl) must be permanent.
Belt overhang fluctuations must be taken into account.

* continuous free mounting area for AirScape

AirScape - Large

Stainless Steel

Suitable for troughangle (X°) from 0° to 45°

Belt overhang: > 4.02"

Free mounting area appx. 4.72" - 5.91"

X°	H	G	S
0°	4.61	4.02	2.95
10°	4.69	4.13	2.56
15°	4.76	4.25	2.36
20°	4.80	4.33	2.17
25°	4.92	4.53	1.97
30°	5.04	4.72	1.77
35°	5.24	4.92	1.57
40°	5.55	5.24	1.38
45°	5.83	5.51	1.18

AirScape - Medium

Stainless Steel

Suitable for troughangle (X°) from 0° to 45°

Belt overhang: > 2.95"

Free mounting area appx. 4.53" - 5.12"

X°	H	G	S
0°	4.41	2.95	1.97
10°	4.49	3.07	1.57
15°	4.61	3.15	1.38
20°	4.65	3.23	1.18
25°	4.69	3.39	0.98
30°	4.72	3.54	0.79
35°	4.88	3.70	0.59
40°	5.04	3.94	0.39
45°	5.08	4.02	0.20

AirScape - Small

Stainless Steel

Suitable for troughangle (X°) from 0° to 45°

Belt overhang: > 2.36"

Free mounting area appx. 3.94" - 4.92"

X°	H	G	S
0°	3.82	2.36	1.77
10°	3.86	2.44	1.38
15°	3.90	2.60	1.18
20°	3.98	2.72	0.98
25°	4.06	2.87	0.79
30°	4.17	3.07	0.59
35°	4.41	3.23	0.39
40°	4.61	3.58	0.20
45°	4.84	3.74	0.00

3/22

